

① Prepare products and tools. (Including Vaseline)



② remove the grip.




③ remove the tail cover and the shell.




④ As a picture shows



⑤ Remove the long bullet baffle section. (AS a picture shows)

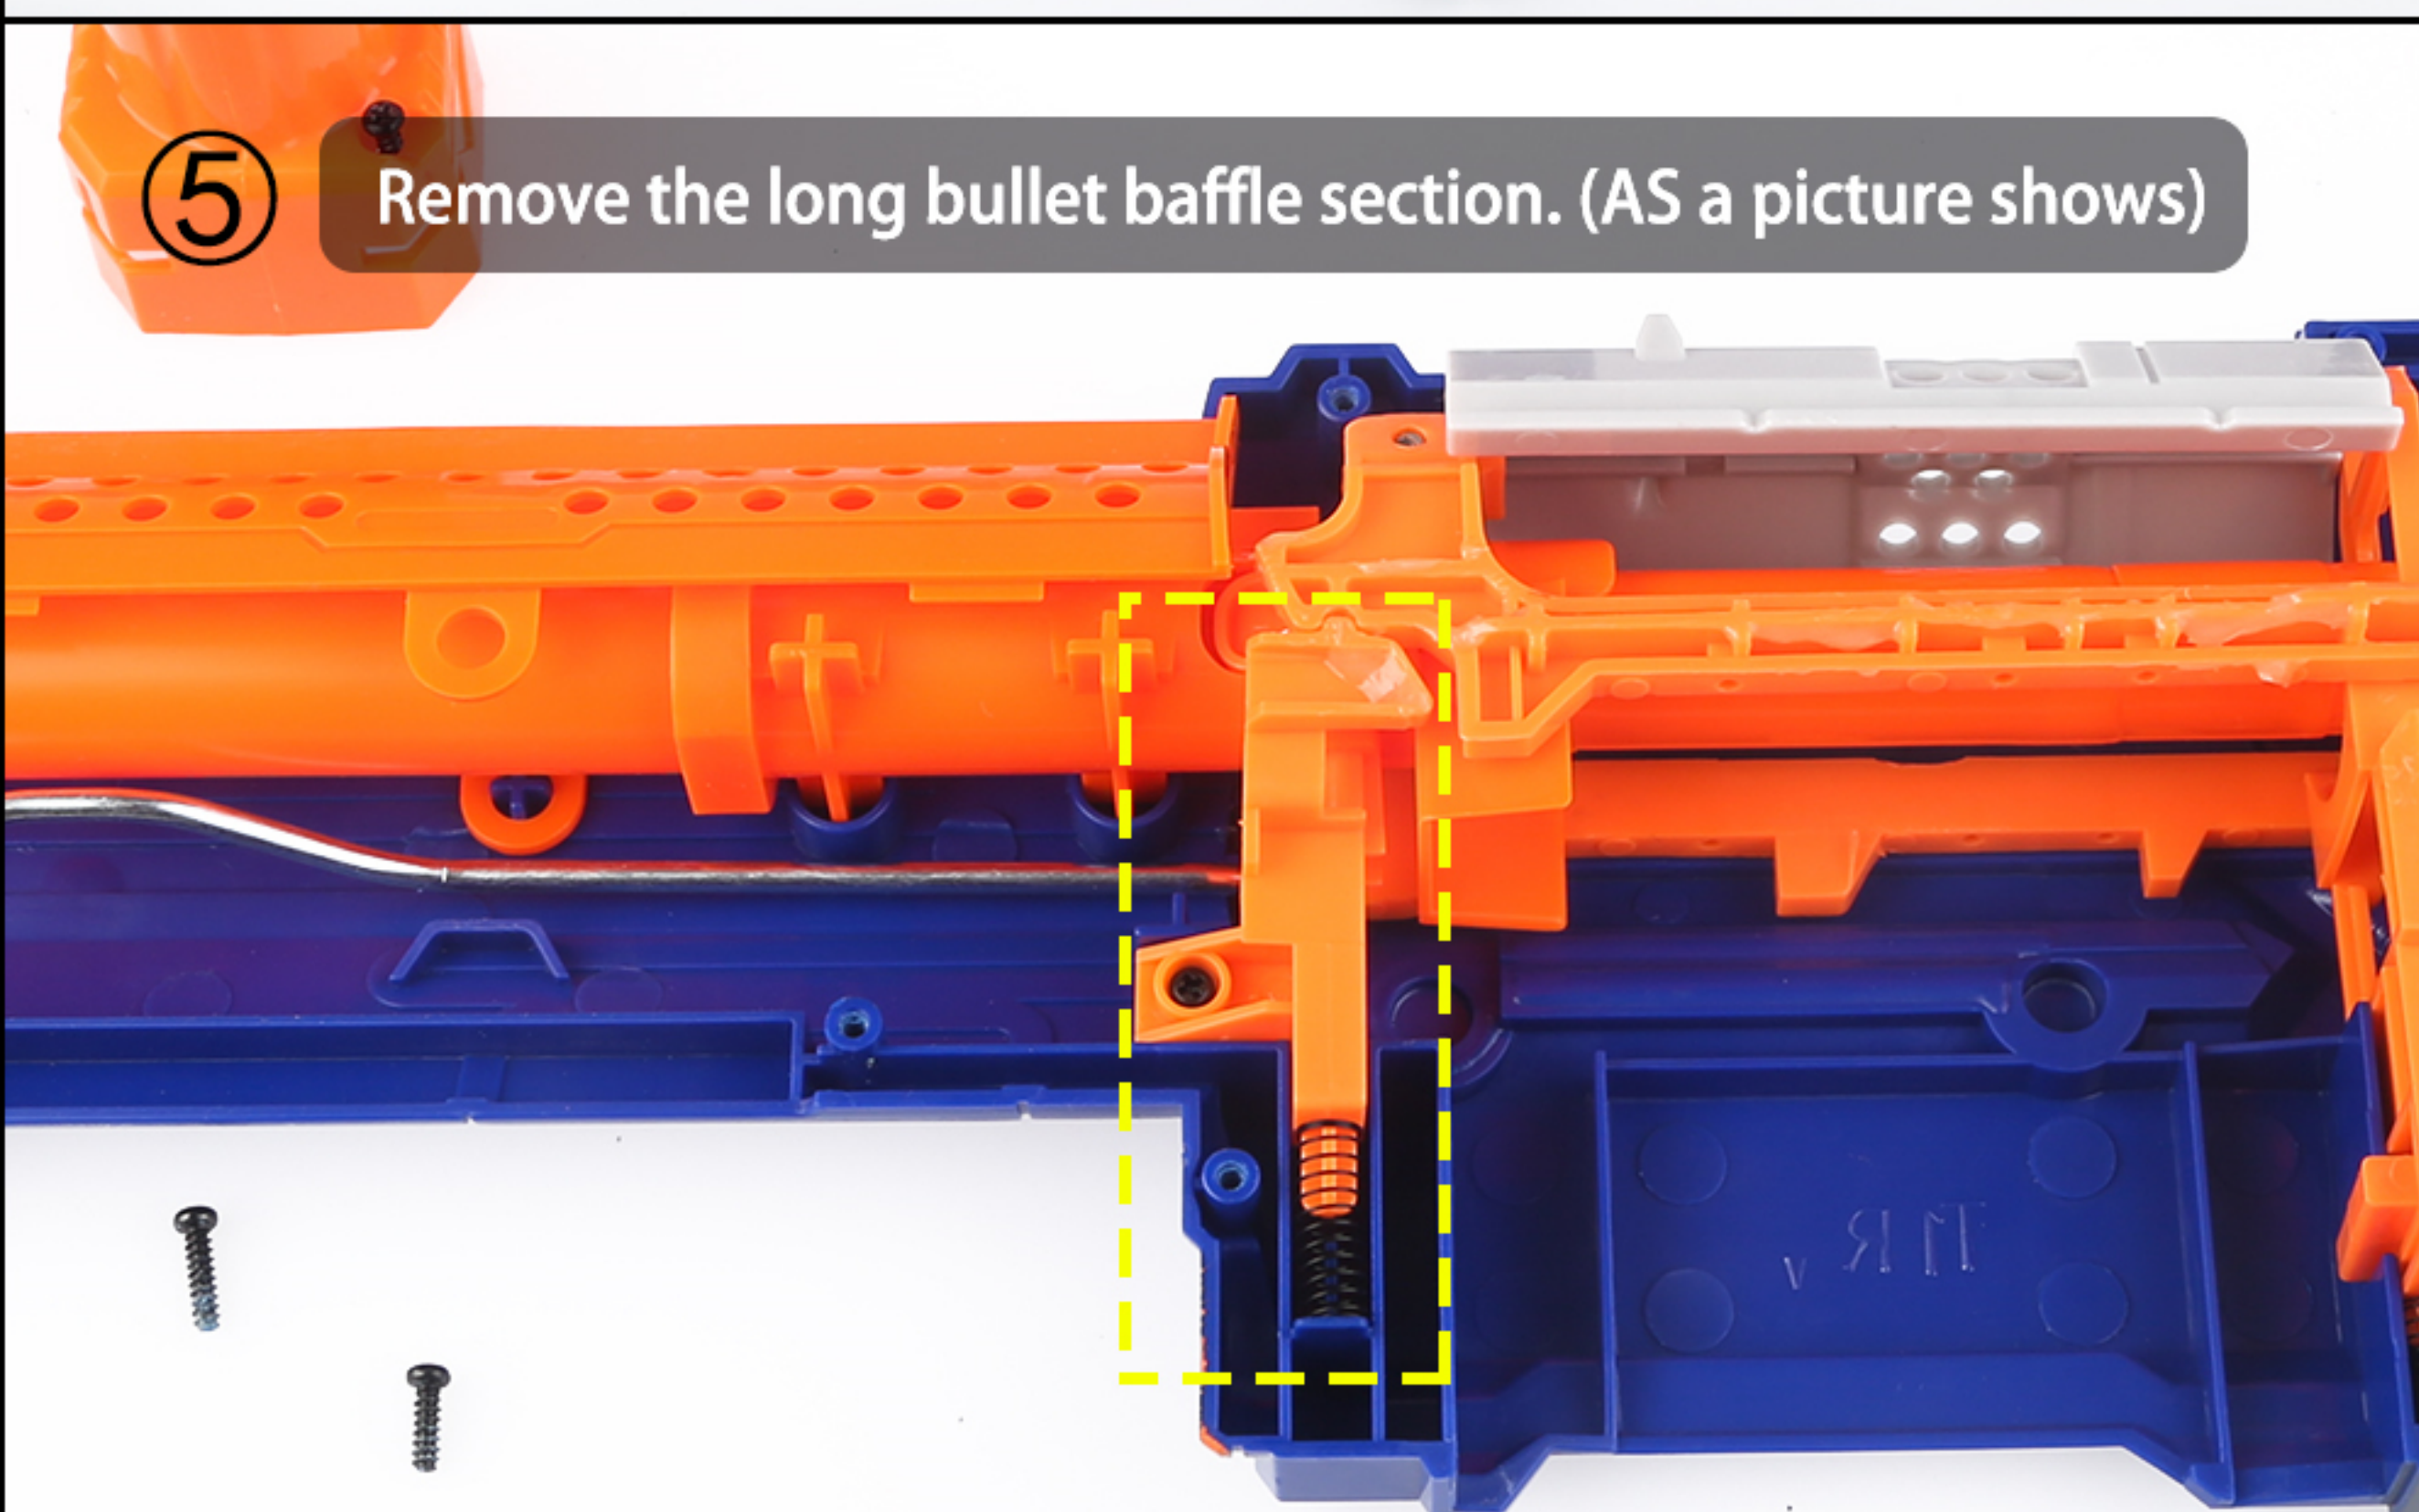

⑥ Take the carriage and pump and the connecting parts out of the main body.

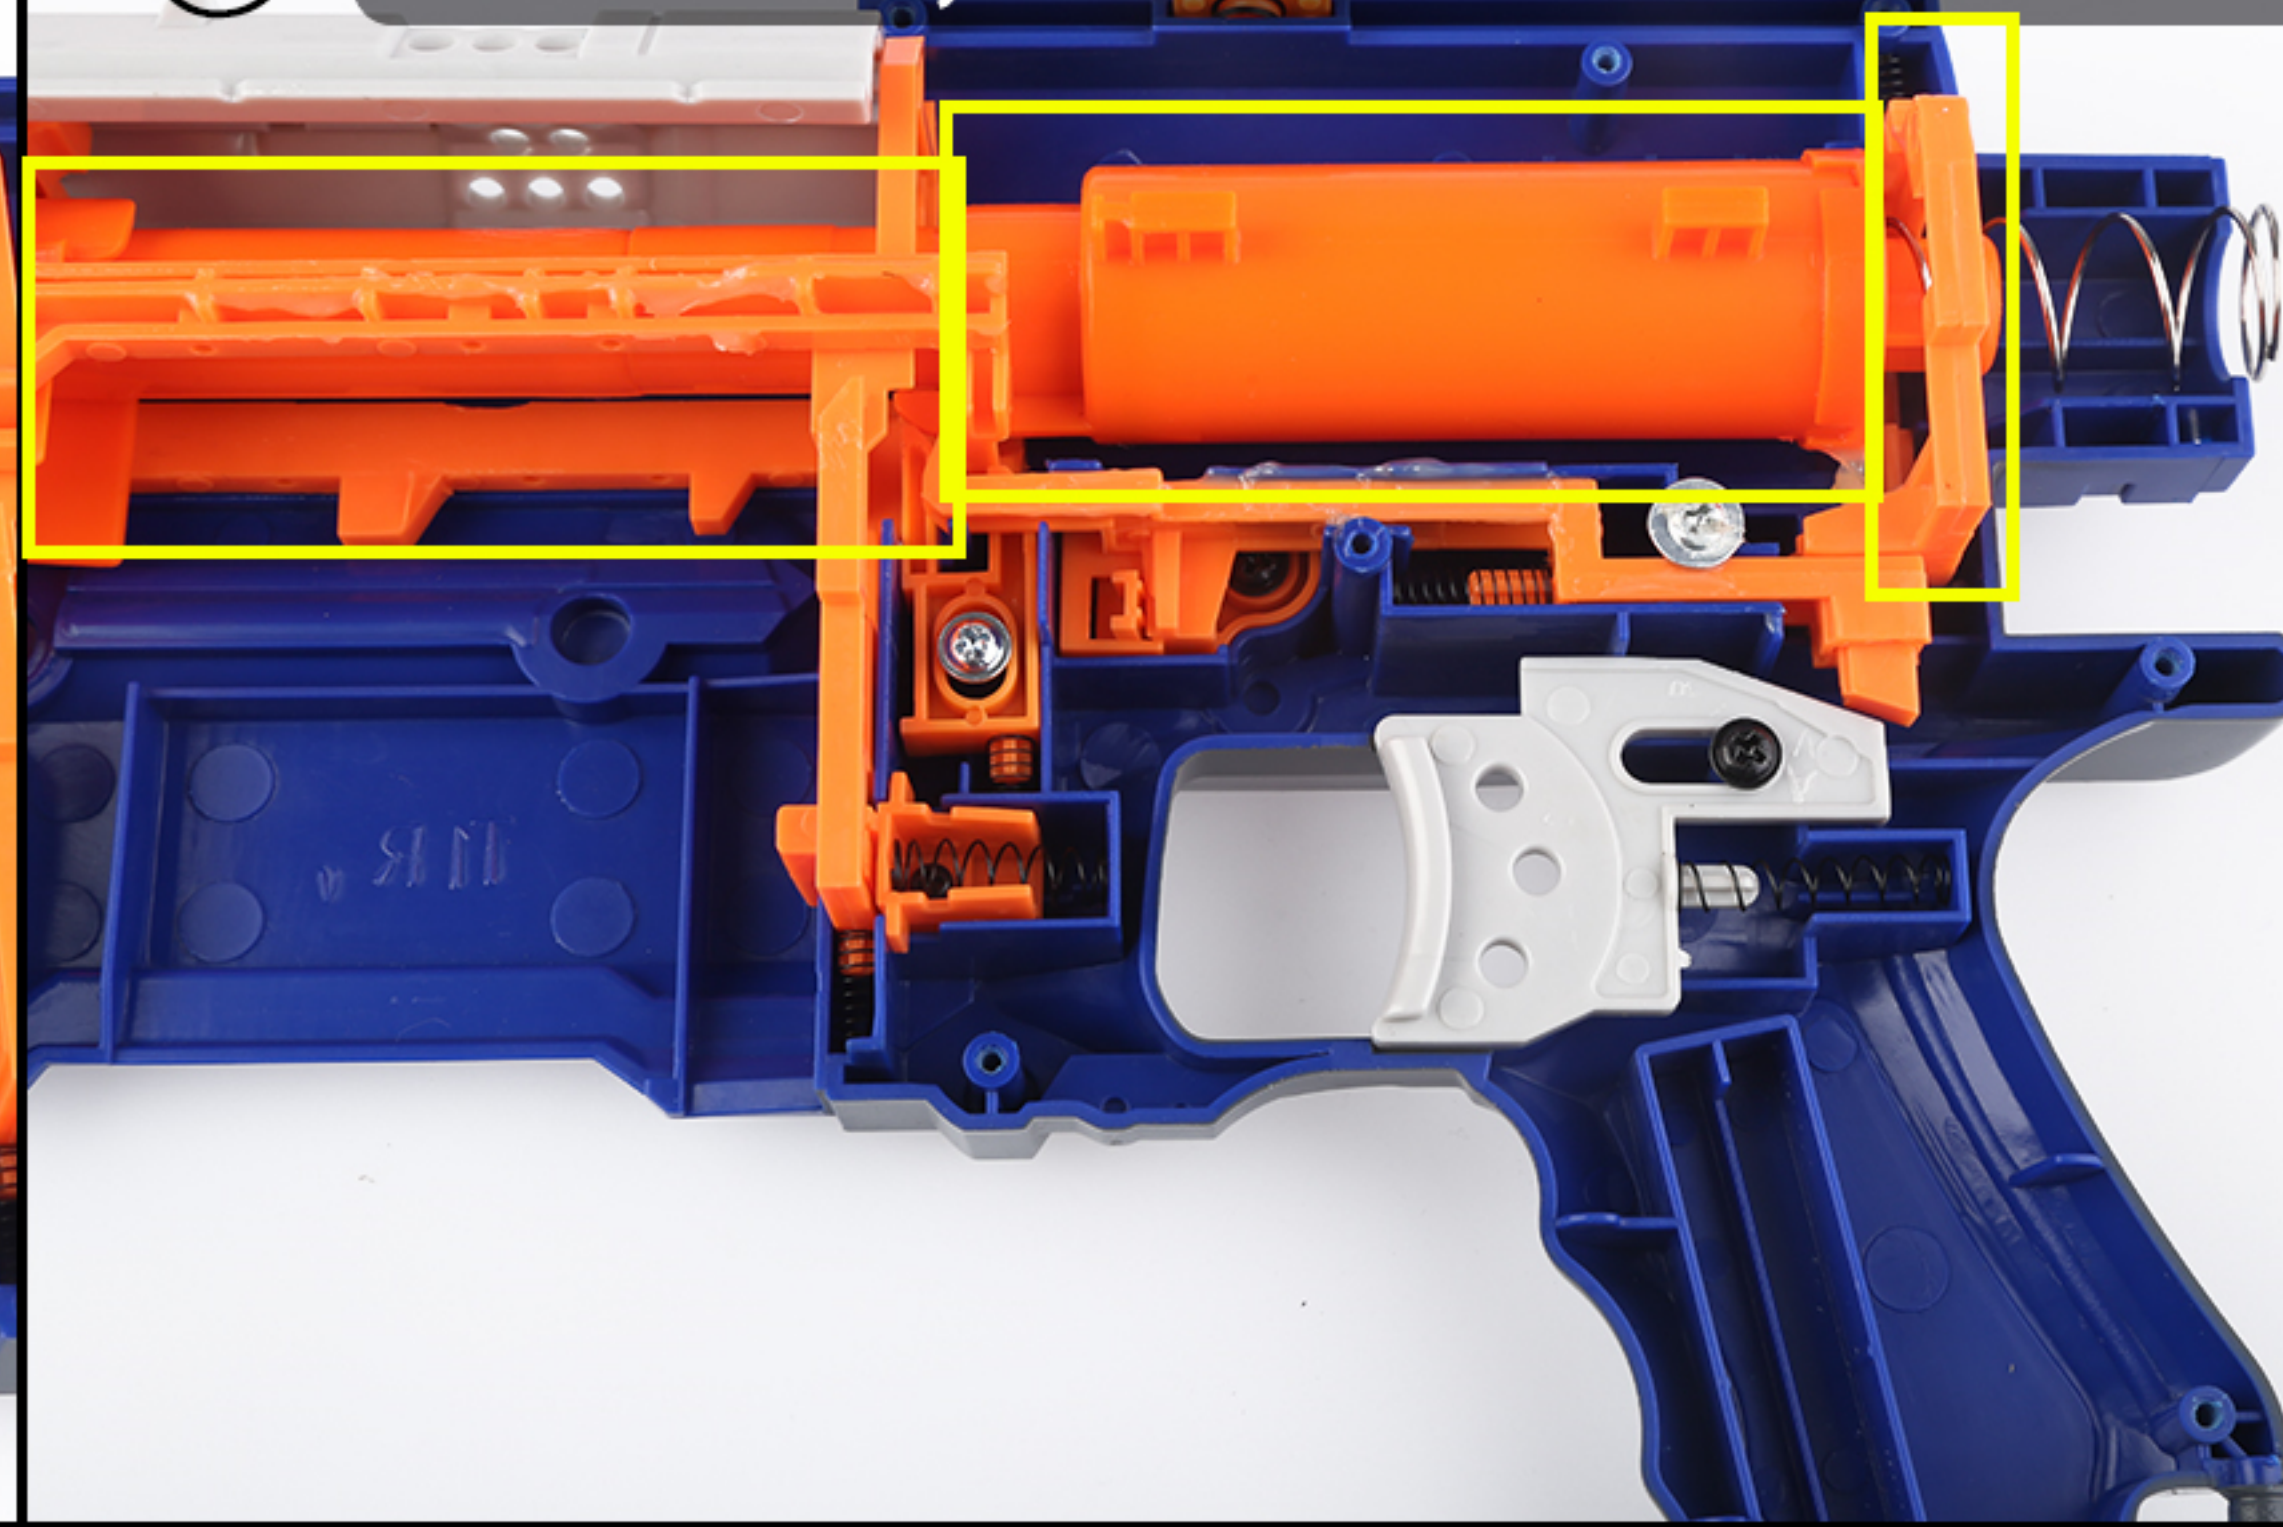




⑦ Replace the spring of the release.



⑧ Place the cushion into the pump. (put it to prevent damage to the parts).

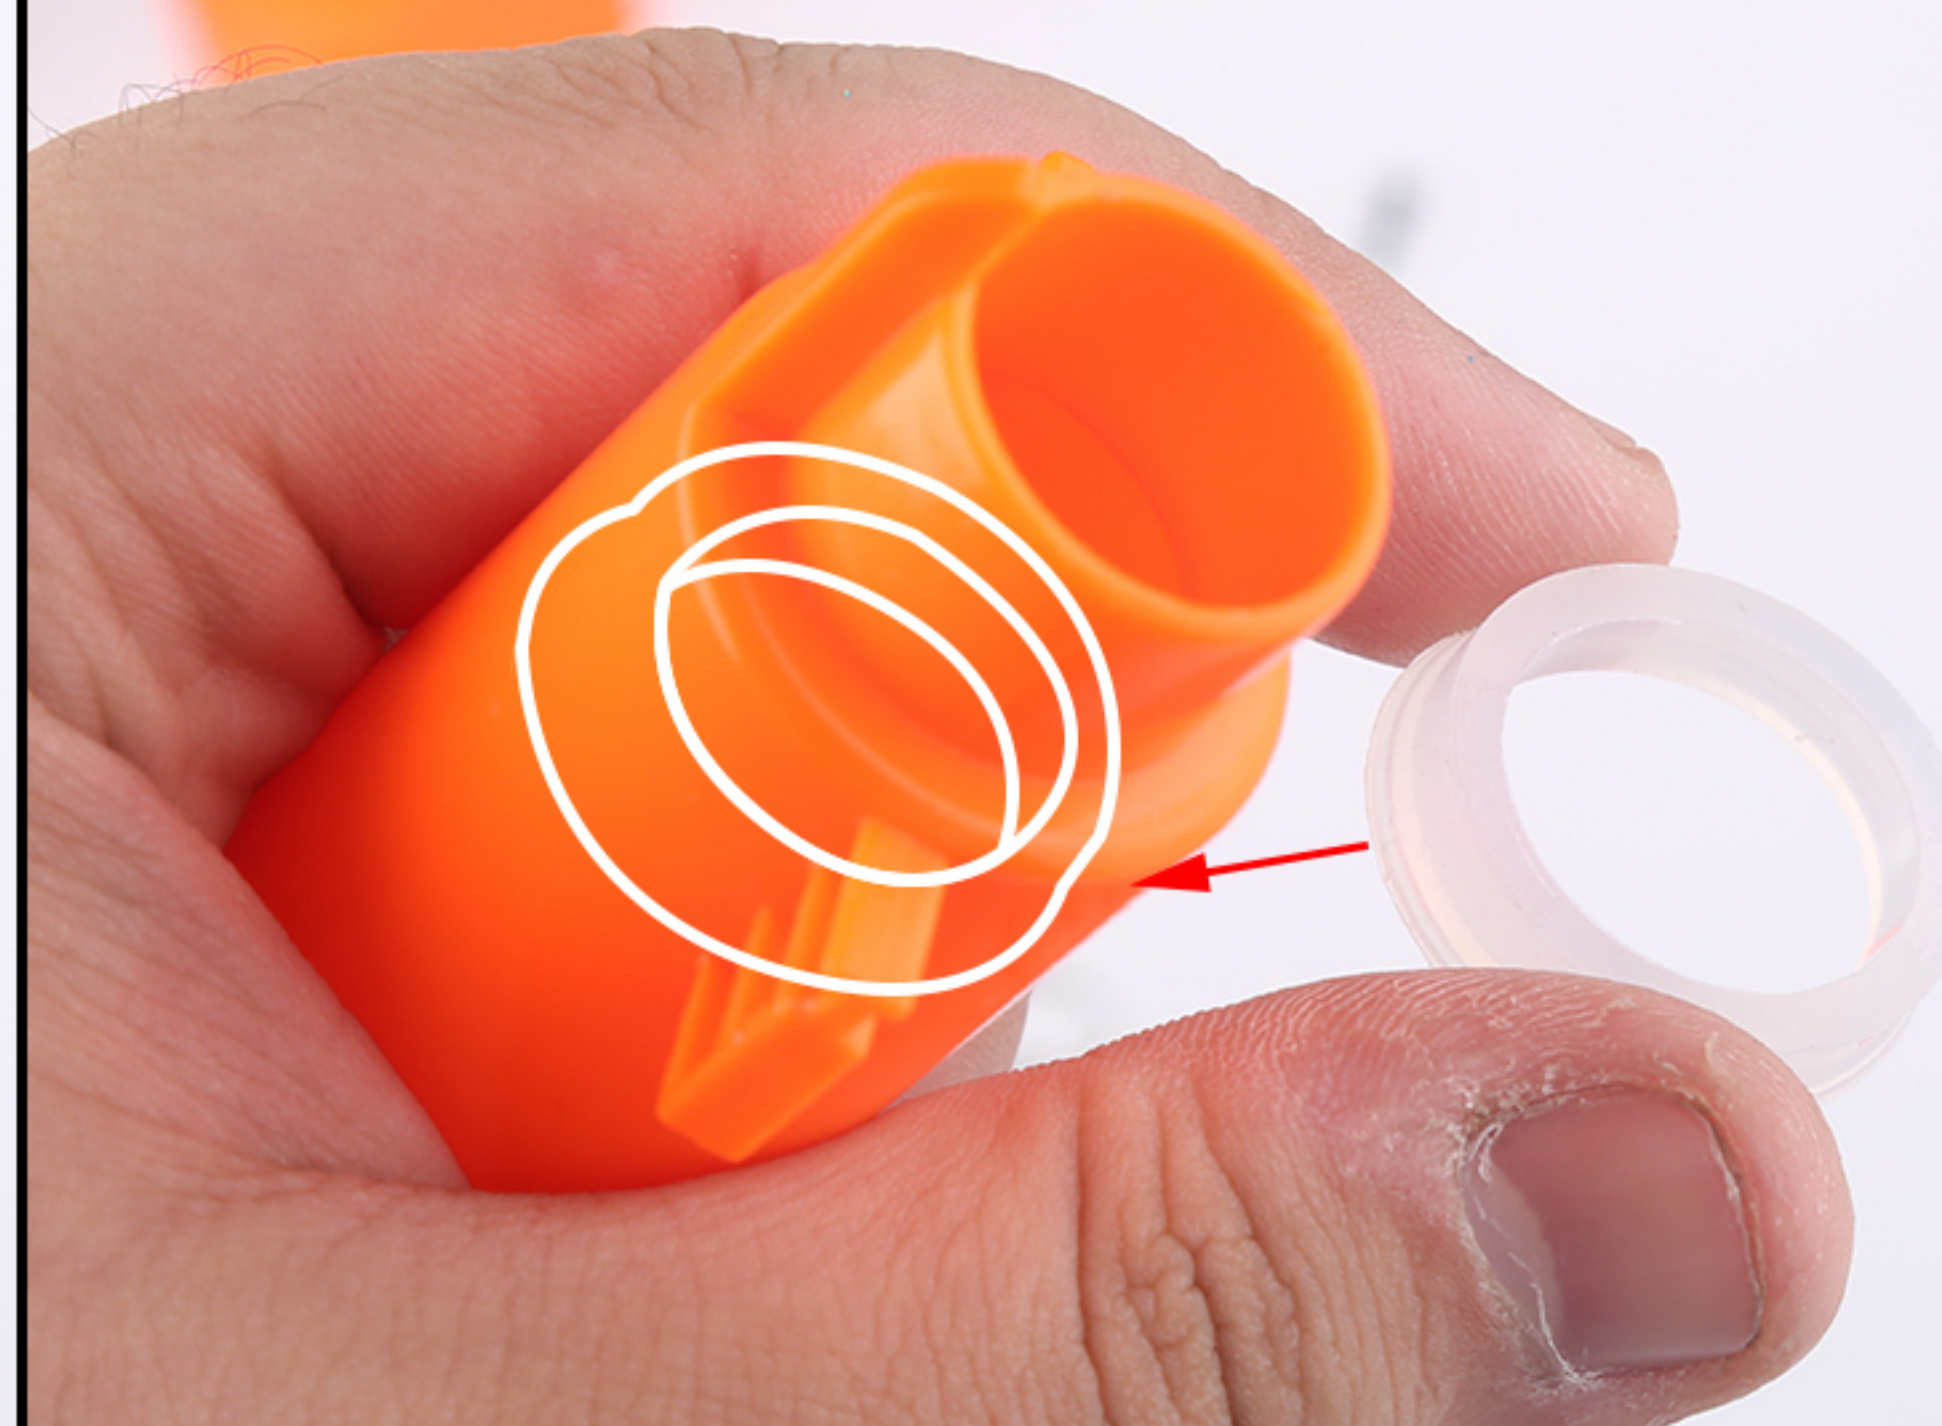

⑨ Replace the Catcher.




⑩ Apply Vaseline to the O-ring.



⑪ Replace the spring.



⑫ Insert the front aluminum tube into the connector (insert it) and secure it with screws.

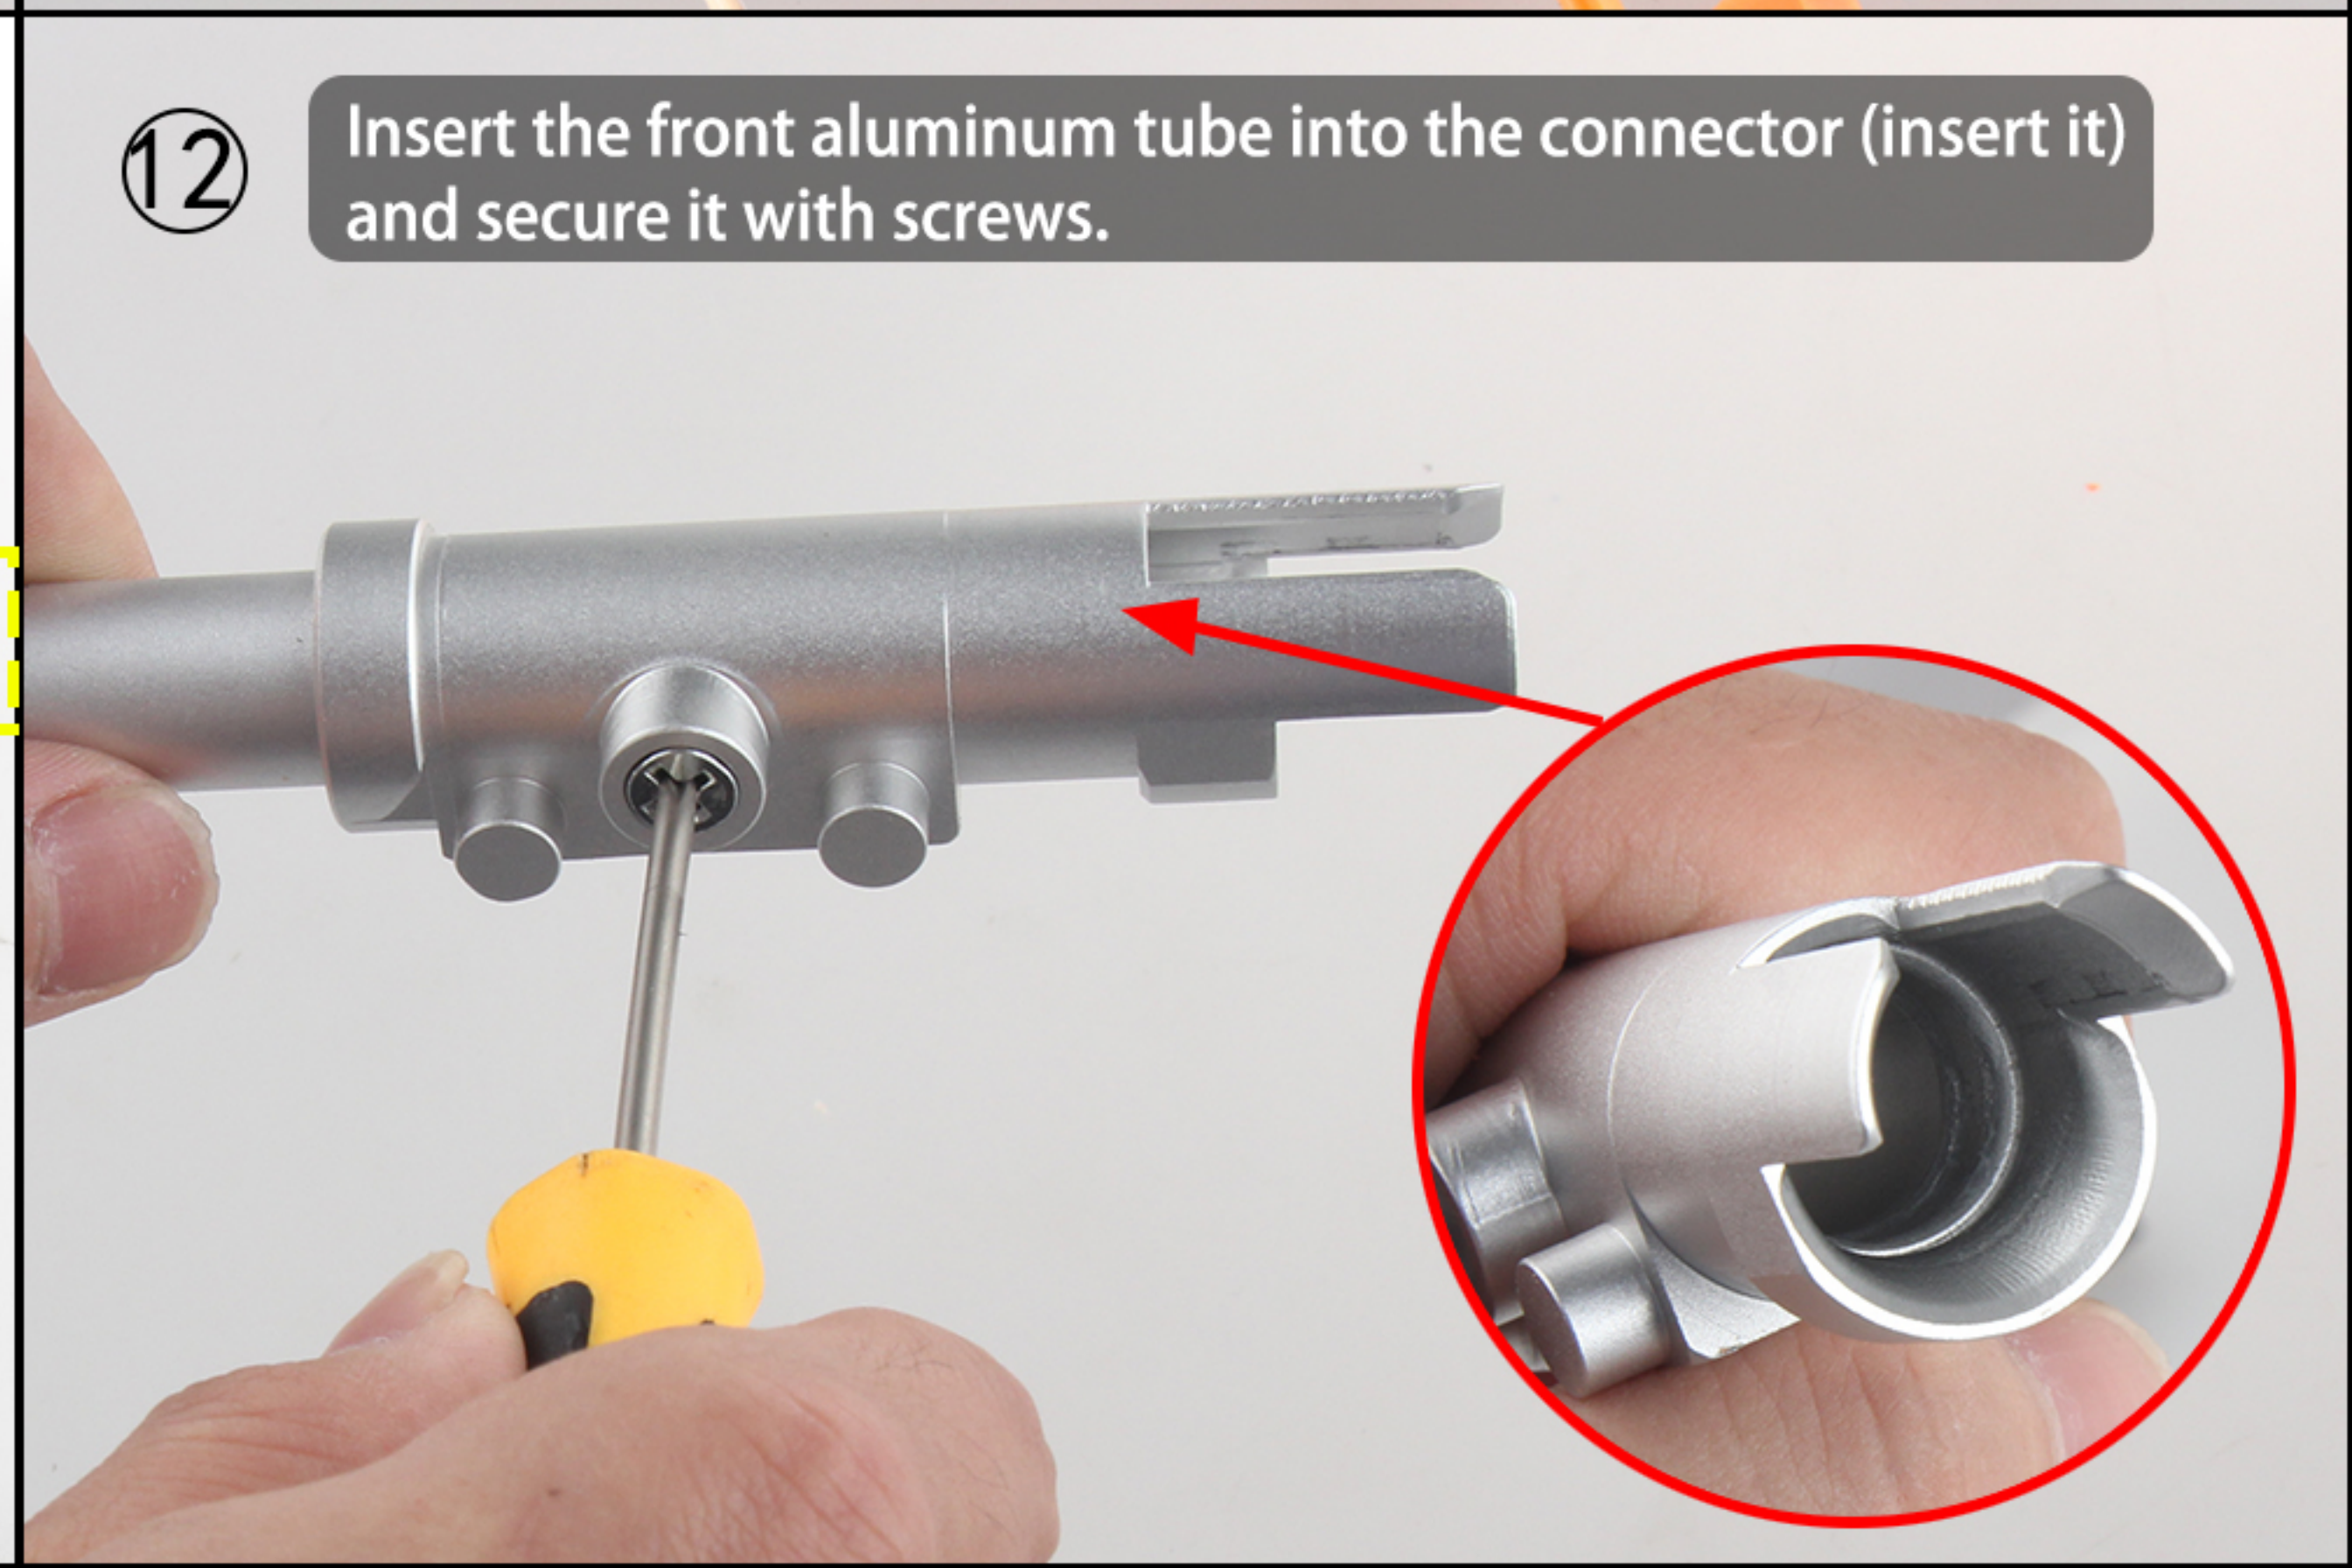




13

Insert the inner tube into the connector.



14

Extend the muzzle with a 19MM drill bit. (If you do not want to expand, cut the inner tube to 140mm long).

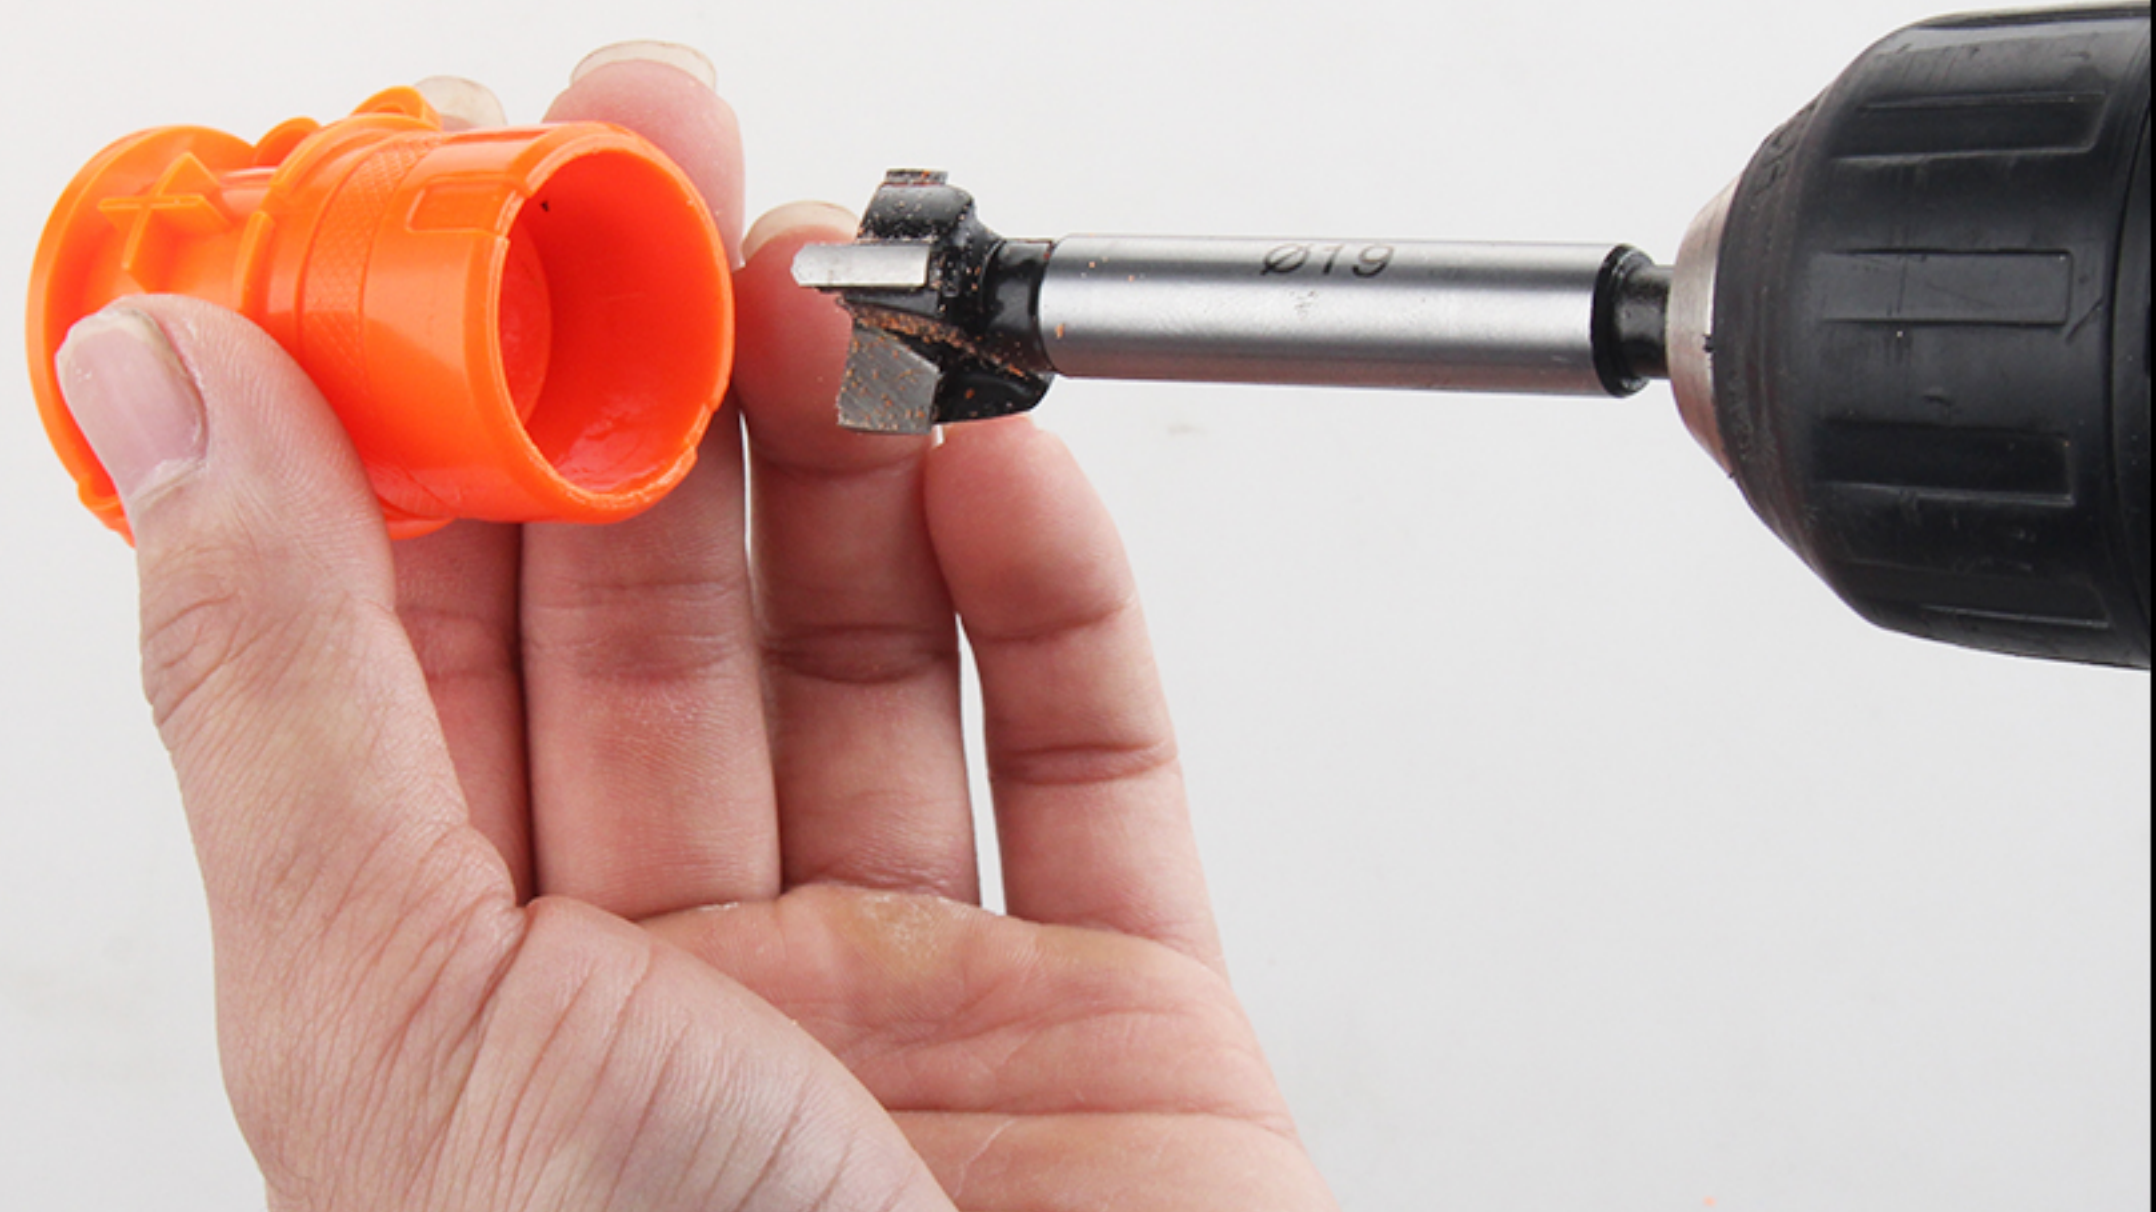

15

Place the parts into the shell as shown.



16

Close the shell casing, press the shell with your left hand, and push the spring into the rear end of the main body with your right thumb.



17

Close the tail cap and screw back the screws.



18